

MotionCam Outdoor HighMount (PhOD) Jeweller user manual

Updated November 20, 2024



MotionCam Outdoor HighMount (PhOD) Jeweller is a wireless motion detector supporting **Photo by alarm**, **Photo on demand**, **Photo by scenario**, and **Photo by schedule** features.

It detects movement at a distance of up to 15 m. The device is equipped with a PIR sensor and uses radio frequency scanning with a K-band microwave sensor to filter out infrared interference. Also, it features an anti-masking system that detects attempts to block

the detector's field of view. The device is designed for outdoor and indoor use.

MotionCam Outdoor HighMount (PhOD) Jeweller communicates with a hub over two secure radio protocols: the detector uses **Jeweller** to transmit alarms or events and **Wings** to transmit photos and update firmware. The communication range in an open space is up to 1,700 m.

[Buy MotionCam Outdoor HighMount \(PhOD\) Jeweller](#)


Functional elements

Detector



1. Hood for protecting the camera and anti-masking sensors from rain and snow.
2. Camera.
3. LED indicator.
4. Masking sensor.
5. Motion sensor lens.
6. Infrared (IR) illumination. It is used to take photos in dark and low-light conditions.
7. SmartBracket mounting panel. To remove the panel, slide it down.
8. Recess for mounting SmartBracket to the swivel mount.
9. Hole for routing an external power supply cable.
10. Holding screw. It is used to fix the device on the SmartBracket mounting panel.
11. Lid of the battery compartment.
12. Terminals for the external power supply connection.
13. QR code with the device ID. It is used to add the device to the hub.
14. Power button.
15. Tamper button.

Swivel mount

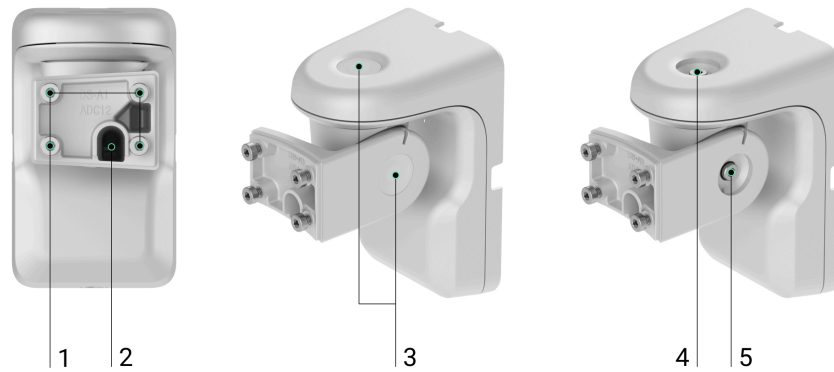

1. Fixing points to attach SmartBracket mounting panel to the swivel mount with screws.
2. Conduit to route an external power supply cable through the swivel mount.
3. Rubber sealing plugs to protect screws that adjust the positioning angles of the detector.

- 4.** Top screw to adjust and fix the horizontal position of the detector.
- 5.** Side screw to adjust and fix the tilt angle of the detector.
- 6.** Holes to attach the swivel mount to the surface.
- 7.** Plastic panel of the swivel mount. It has a bubble level, a magnet, and elements for cable management.
- 8.** Holding screw. It is used to fix the elements of the swivel mount.
- 9.** Perforated part of the plastic panel for routing the cable from the top of the swivel mount.
- 10.** Spots for routing the cable through the wall.
- 11.** Perforated parts of the plastic panel for routing the cable from the sides of the swivel mount.
- 12.** Perforated part with a magnet of the plastic panel. Trigger the device magnetometer in case of any attempts to tilt or shift the detector or detach it from the surface. Do not break it off.
- 13.** Fasteners to fix the cables with ties.
- 14.** Hole to attach the plastic panel on the surface.
- 15.** Bubble level to check the inclination angle of the mount during installation.

16. Magnet. It is used to trigger the device magnetometer in case of any attempts to tilt or shift the detector or detach it from the surface.

Compatible hubs and range extenders

An Ajax hub with the firmware OS Malevich 2.26 and later is required for the device to operate.

Check device compatibility

Operating principle

MotionCam Outdoor HighMount (PhOD) Jeweller is a wireless motion detector supporting photo verification. It is equipped with two IR sensors, an additional K-band microwave sensor, a camera, and an anti-masking system.

The device detects movement with IR sensors by capturing moving objects with temperatures close to that of the human body. After detecting movement using IR sensors, the detector starts an additional RF scanning of the detection zone with the built-in K-band microwave sensor to filter out false alarms.

When the movement is detected, MotionCam Outdoor HighMount (PhOD) Jeweller takes a series of images, which allows for assessing the situation

at the site in dynamics. This saves users from unnecessary anxiety and security companies from false patrol despatches.

[Learn more about photo verification](#)

In case of an alarm, it instantly sends an alarm to the hub, activating the sirens connected to the system, triggering scenarios, and notifying users and the security company. All MotionCam Outdoor HighMount (PhOD) Jeweller alarms and events are recorded in the event feed of the Ajax apps.

Users and the monitoring company know exactly where motion is detected. The notifications contain the name of a space (the name of a guarded facility), the device name, and the virtual room to which the device is assigned.

[How Ajax notifies users of alarms](#)

[Learn more about Ajax motion detectors](#)

Protection against false alarms

MotionCam Outdoor HighMount (PhOD) Jeweller uses the **SmartDetect algorithm** to protect against false alarms. This algorithm allows the detector to analyze the thermal diagram read by the sensor: the

intensity of infrared radiation, size of the heat spot, time spent in the detection area, and other parameters.

After this stage, the detector performs additional RF scanning of the detection zone with a built-in K-band microwave sensor to eliminate false alarms due to IR interference, such as air flows, heated curtains and blinds, fans, fireplaces, air conditioners, etc. Depending on the result, the alarm will be activated or not.

Temperature compensation

Due to temperature compensation, the detector responds to movements, even if the temperature at the facility is close to the human body temperature. Read more about temperature compensation in [the article](#).

Anti-masking system

Masking is an attempt to block the view of the detector. MotionCam Outdoor HighMount (PhOD) Jeweller detects the following types of masking:

- An obstacle in front of the detector's motion sensor sensitive area.

- Painting over the detector's motion sensor sensitive area.
- Taping the detector's motion sensor sensitive area.

The system notifies users and the security company's monitoring station about masking. The maximum masking detection time is up to 180 s (depending on the obstacle type and the distance to it).



If the **Anti-masking** feature is enabled, it is always active and works regardless of the security mode.



[Learn more](#)

Jeweller and Wings data transfer protocols

Jeweller and Wings are wireless data transfer protocols that provide fast and reliable two-way communication between the hub and devices. The detector uses **Jeweller** to transmit alarms and events and **Wings** to transmit photos and update the firmware.

[Learn more](#)

Firmware update

If a new firmware version for MotionCam Outdoor HighMount (PhOD) Jeweller is available, the  icon appears in [Ajax apps](#) in the **Devices**  tab. An admin or a PRO with access to the system settings can run an update via device [states](#) or [settings](#). The on-screen instructions help to update the firmware successfully.

Sending events to the monitoring station

The Ajax system can transmit alarms to the [PRO Desktop](#) monitoring app as well as the central monitoring station (CMS) in the formats of **SurGard (Contact ID)**, **SIA (DC-09)**, **ADEMCO 685**, and [other protocols](#).

MotionCam Outdoor HighMount (PhOD) Jeweller can transmit the following events:

1. Motion alarm.
2. Masking alarm.

3. Alarm that the device was moved: the magnetometer has detected attempts to tilt or shift the detector or detach it from the surface.
4. Tamper alarm. Tamper recovery.
5. Loss and restoration of connection with the hub.
6. Permanent deactivation/activation of the device.
7. One-time deactivation/activation of the device.

When an alarm is received, the operator of the security company monitoring station knows what happened and precisely where to send a fast response team. The addressability of Ajax devices allows sending events to the **PRO Desktop** or the CMS, the type of the device, its name, security group, and virtual room. The list of transmitted parameters may differ depending on the type of CMS and the selected communication protocol.



You can find the device ID and loop (zone) number in the device [states](#).

Photo verification

Photo verification allows you to assess what is happening at the secured site with a built-in camera. The device can take from 1 to 5 images with a

resolution of 320 × 240 pixels and up to 3 images with a resolution of 640 × 480 pixels.

With photo verification, you can receive visual confirmations of alarms from MotionCam Outdoor HighMount (PhOD) Jeweller and other Ajax devices. You can also check the situation, such as finding out what the children are doing, checking if your pet is OK, or simply monitoring the situation at home.

The detector has an infrared illumination for shooting in the dark that turns on in case of low light. MotionCam Outdoor HighMount (PhOD) Jeweller takes black and white photos when shooting in these conditions.

There are four types of photo verification: photo by alarm, photo on demand, photo by scenario, and photo by schedule.

The photos can be displayed in the app as an image or an animated series (if more than 1 photo is taken). The number of images in the series can be configured in Ajax apps. To view the received photos, tap on the corresponding MotionCam Outdoor HighMount (PhOD) Jeweller notification in the event feed.

Users can view the images from the animated series frame by frame by swiping them left.

You can save the photo verification result as a video or photo by tapping the download icon.

Photo by alarm

The detector takes **photos by alarm** only if the movement is detected and only when the armed mode is on. By default, the **Photo by alarm** feature is enabled for all detectors. The number of images and their resolution can be changed in the [device settings](#). Photos by alarm are available to all users with access to the event feed.



The detector does not switch to armed mode instantly. The switching time depends on the delay when leaving (specified in the **device settings**) and the hub-detector polling interval. The polling interval specified in the **Jeweller** or **Jeweller/Fibra** settings; its default value is **36 seconds**. In the first case, the delay is set by a user or a PRO with admin rights. In the second case, the delay occurs because the hub takes one polling interval to notify the detector about the security mode change.

Features of alarm photo verification

Photo on demand

The **Photo on demand** feature allows users to take photos using the built-in cameras of detectors that support photo verification. With this feature, you can check the situation at the site: find out what the children are doing, check if your pet is OK, or simply monitor the situation at home. Depending on the settings, photos can be taken at any time or when MotionCam Outdoor HighMount (PhOD) Jeweller is armed.

By default, the **Photo on demand** feature is disabled for all users. Users with the right to manage privacy settings (space settings, the **Privacy** section) determine who can take and view photos on demand and which detectors that support photo verification can take pictures. PRO users cannot manage privacy settings, but they can take photos on demand if they have been granted such permission.

Privacy settings do not apply to photos taken by detectors triggered in case of an alarm. All system users who have access to the event feed can view the photos taken in case of an alarm.



Photos on demand are not sent to the security company monitoring station.

PRO Desktop users can take and view photos on demand only from their personal account if an admin has granted them the appropriate access rights. Taking and viewing photos on demand is not available

for the security company profile in the PRO Desktop app.

More about the Photo on demand feature

How to set Photo on Demand

Photo by scenario

The **Photo by scenario** feature allows you to create a scenario for motion detectors with photo verification. These detectors will take pictures in case of alarms from specified Ajax devices.

By default, the **Allow photos by scenarios** option is disabled for all detectors. An admin or a user with access to privacy settings can enable it.

In the system settings, you can also set exactly when a detector with photo verification can take pictures according to a scenario: always or when the device is armed.

Photos by scenario are available to all system users who have access to the event feed. The event of taking a photo after the alarm from specified devices is sent to the security company monitoring station

via SIA DC-09 (SIA-DCS) and other proprietary protocols. The event code is 730.

If the CMS software supports photo verification, photos by scenario are available to the CMS engineers. Photos by scenario are also available in the PRO Desktop app.



Photos by scenario will not be sent to the CMS if only a direct connection with the monitoring station is used.

More about the Photo by scenario feature

How to set up Photo by scenario

Photo by schedule

The **Photo by schedule** feature allows you to create a scenario for motion detectors with photo verification. These detectors will take pictures by schedule.

Before creating a scheduled scenario, enable the Allow photos by scenarios option. An admin or a user with access to privacy settings can enable this option.

You can precisely set when a detector with photo verification can take pictures according to a scheduled scenario: always or when it is armed.

Photos taken by schedule are available to all system users who have access to the event feed. The event of taking a photo is sent to the CMS via **SIA DC-09 (SIA-DCS)** and other proprietary protocols. The event code is 731.

If the CMS software supports photo verification, photos by schedule are available to the CMS engineers. These photos are also available in the **PRO Desktop** app.



Photos taken by schedule are not sent to the CMS if only a direct connection with the monitoring station is used.

How to set up Photo by schedule

Selecting the installation site

MotionCam Outdoor HighMount (PhOD) Jeweller is suitable for protecting the territory of the protected object: private houses, parking lots, construction areas, unheated premises, and other objects. The

device is suitable for installation both outdoors and indoors.

The device is designed for installation at a height of 2–4 m. The device should be installed on a flat, stable surface, such as the wall of a house or a solid fence. Installing the device on a shaky (unstable) surface will result in false alarms.



Depending on the installation height, the tilt angle and horizontal position of the device must be adjusted using the swivel mount. This is necessary to ensure that detector's motion sensors and camera have the correct fields of view. The direction of the detector sensors should be perpendicular to an alleged intrusion path to the site.

When choosing where to place MotionCam Outdoor HighMount (PhOD) Jeweller, consider the parameters that affect its operation:

- Jeweller and Wings signal strength.
- Motion detection area.
- Distance between the detector and another detector with K-band microwave sensor should be 20 cm or more.
- The presence of objects or structures that may obstruct the detector's view.

Consider the recommendations for placement when developing a project for the system of the facility. The Ajax system must be designed and installed by specialists. A list of recommended partners is [available here](#).

Signal strength

The signal strength is determined by the number of undelivered or corrupted data packages over a certain period of time. The  icon in the **Devices**  tab in Ajax apps indicates the signal strength:

- **three bars** – excellent signal strength;
- **two bars** – good signal strength;
- **one bar** – low signal strength, stable operation is not guaranteed;
- **crossed out icon** – no signal.



Check the Jeweller and Wings signal strength before final installation. With a signal strength of one or zero bars, we do not guarantee stable operation of the device. Consider relocating the device, as adjusting its position even by 20 cm can significantly improve the signal strength. If the signal remains poor or unstable after relocation, consider using a [radio signal range extender](#).

Refer to the [Functionality testing](#) section to learn how to run Jeweller and Wings signal strength tests.


[What is Jeweller signal strength test](#)

[What is Wings signal strength test](#)

Motion detection area

The location of the detector determines the area to be monitored and the effectiveness of the security system. When selecting the installation place, consider the direction of the detector sensors and camera, viewing angles, and the presence of obstacles to the detector's view.

The detector can recognize motion at a distance of up to 15 m. The direction of the detector sensors should be perpendicular to the intended entry path into the site. Ensure that no structures or objects obstruct the detector's view.

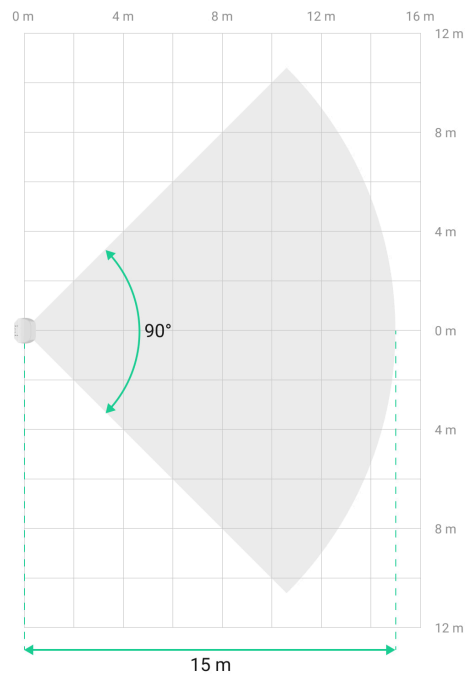

Horizontal characteristics of the motion detection area

When installing the detector, take a test photo of the motion detection area and perform the Detection zone test. This allows you to check the operation of the device and accurately determine the sector in which the detector registers motion. Refer to the Functionality testing section to learn how to run the tests.

Do not install the detector

1. In places where objects or structures may obstruct the detector's view. For example, behind a tree or a column.
2. In places where glass structures may obstruct the detector's view; the detector doesn't detect

movement behind glass.

3. In front of water reservoirs or pools if they are located in the detection zone of the detector.
4. Near other detectors with K-band microwave sensors. The minimum distance between devices should be **at least 20 cm**. Otherwise, detection quality can be decreased or false alarms can be activated because of wave interference of K-band microwave sensors.
5. In places with low or unstable Jeweller or Wings signal strength.
6. Closer than 1 m to the hub or radio signal range extender.

Installation



Before installing MotionCam Outdoor HighMount (PhOD) Jeweller, ensure that you have chosen the optimal location that complies with the requirements of this manual.

MotionCam Outdoor HighMount (PhOD) Jeweller is designed to be installed using a swivel mount only. Installing the device on a swivel mount allows adjusting the tilt angle and horizontal position of the

detector and ensures advanced sabotage protection with a built-in magnetometer.

To install the device:

1. Remove the plastic panel from the swivel mount. If you are going to connect the external power supply, carefully break out the corresponding perforated part to run the cable from the top, back, or sides. Also, refer to the [Connecting an external power supply](#) section for more information.
2. Attach the plastic panel to the surface using a bundled screw.
3. Remove the rubber sealing plugs that protect the top and side screws of the swivel mount. Do not use sharp or spike tools to prevent damaging the sealing plugs.
4. Unscrew the top screw and the holding screw at the bottom of the swivel mount. Disassemble the rear part of the swivel mount by sliding it up.



If you are connecting an external power supply, refer to the [Connecting an external power supply](#) section to learn how to route the cable through the swivel mount.

- 5.** Place the rear part of the swivel mount over the plastic panel and fix it on the surface with bundled screws. Use all fixing points.
- 6.** Attach the front part of the swivel mount to the rear part and tighten the top screw and the holding screw at the bottom.
- 7.** Remove the SmartBracket mounting panel from the detector. Unscrew the holding screw first and slide the panel down.
- 8.** Attach the SmartBracket mounting panel to the swivel mount and secure it with bundled screws. Use all fixing points.
- 9.** Add the detector to the system.
- 10.** Attach the hood to the detector.
- 11.** Place the detector on the SmartBracket mounting panel.
- 12.** Lose the top screw of the swivel mount, adjust the horizontal position of the detector field of view, then tighten the top screw up.
- 13.** Lose the side screw of the swivel mount, adjust the detector's tilt angle, then tighten the side screw up.
The tilt angle depends on the detector installation height. To adjust the proper detector field of view, we recommend setting the

following tilt angle relative to the detector installation height:

Installation height	Tilt angle
2.0 m	15.0°
2.2 m	15.9°
2.4 m	16.8°
2.6 m	17.7°
2.8 m	18.6°
3.0 m	20.0°
3.2 m	20.4°
3.4 m	21.3°
3.6 m	22.2°
3.8 m	23.1°
4.0 m	24.0°

- 14.** Run the functionality testing.
- 15.** If the tests are successful, ensure the firm tightening of the top and side screws of the swivel mount and install the rubber sealing plugs that protect these screws.
- 16.** Remove the detector from the SmartBracket mounting panel and install it again to initiate the calibration of the magnetometer and masking sensors. For proper calibration, ensure that there

are no obstacles in front of the detector and that it is not moved.



Calibration starts automatically after the detector is installed on the SmartBracket mounting panel.

17. Tighten the holding screw on the bottom of the detector enclosure. The screw is needed for more reliable fastening and protection of the device from quick dismantling.

Connecting an external power supply

When connecting an external power supply and using MotionCam Outdoor HighMount (PhOD) Jeweller, follow the general electrical safety regulations for using electrical appliances, as well as the requirements of regulatory legal acts on electrical safety.

MotionCam Outdoor HighMount (PhOD) Jeweller is equipped with terminals for connecting a 12–24 V_{DC} power supply.

When external power is connected, the pre-installed batteries serve as a backup power source. Do not remove them while connecting the power supply.



Before installing the device, make sure to check the wires for any damage to the insulation. Use only a grounded power source. Do not disassemble the device while it's under voltage. Do not use the device with a damaged power cable.

To connect an external power supply:

1. De-energize the external power supply cable.
2. Dismount the detector and swivel mount if they are already mounted.
3. Remove the plastic panel from the swivel mount. Carefully break out the corresponding perforated part to run the cable from the top, back, or sides.
4. Remove the rubber sealing plugs that protect the top and side screws of the swivel mount. Do not use sharp or spike tools to prevent damaging the sealing plugs.
5. Unscrew the top screw and the holding screw at the bottom of the swivel mount. Disassemble the rear part of the swivel mount by sliding it up.
6. Route the cable inside the detector through the following elements:
 1. The plastic panel of the swivel mount
 2. The rear part of the swivel mount

3. The front part of the swivel mount
4. The SmartBracket mounting panel
7. Connect the cable to the terminals by observing polarity (marked on the plastic). Firmly secure the wires to the terminals.
8. Install the swivel mount and the detector on the surface according to **steps 5–16** described in Installation section.
9. Switch on the external power.

Once the external power supply is connected, the **External power** parameter in the device states changes its status to **Connected**.

Adding to the system

Before adding a device

1. Install an Ajax app.
2. Log in to your account or create a new one.
3. Select a space or create a new one.
4. Add at least one virtual room.
5. Add a compatible hub to the space. Ensure the hub is switched on and has internet access via

Ethernet, Wi-Fi, and/or mobile network.


6. Ensure the space is disarmed, and the hub is not starting an update by checking statuses in the Ajax app.



Only a PRO or a space admin with the rights to configure the system can add a device to the hub.

Types of accounts and their rights

Adding to the hub

1. Open the Ajax app. Select a space to which you want to add the device.
2. Go to the **Devices**  tab and tap **Add device**.
3. Assign a name to the device.
4. Scan the QR code or enter the device ID manually. A QR code with ID is placed on the device enclosure. Also, it is duplicated on the device packaging.
5. Select a virtual room and a security group (if Group mode is enabled).
6. Tap **Add** – the countdown will begin.

7. Switch on the device by holding the power button for 3 seconds.

Once added to the hub, the device will appear in the list of hub devices in the Ajax app. The update frequency for device statuses in the list depends on the **Jeweller** or **Jeweller/Fibra** settings with the default value of 36 seconds.

If the connection fails, try again in 5 seconds. If the maximum number of devices has already been added to the hub, you will receive an error notification while adding.



MotionCam Outdoor HighMount (PhOD) Jeweller works with only one hub. When paired with a new hub, it stops sending events to the old one. Adding the device to a new hub does not automatically remove it from the device list of the old hub. This must be done through the Ajax app.

Functionality testing







The Ajax system offers several types of tests to help select the correct installation place for the devices. For MotionCam Outdoor HighMount (PhOD) Jeweller, the following tests are available:








- Motion detection area test – to take a test photo to check the detector’s field of view. The photo helps to adjust the detector’s tilt angle and horizontal position correctly.
- Jeweller signal strength test – to determine the signal strength and stability between the hub (or the radio signal range extender) and the device via the wireless Jeweller data transfer protocol at the device installation site.
- Wings signal strength test – to determine the signal strength and stability between the hub (or the radio signal range extender) and the device via the wireless Wings data transfer protocol at the device installation site.
- Detection zone test – to check how the detector responds to **motion** and **masking** at the device installation site.
- Signal attenuation test – to decrease or increase the power of the radio transmitter; to check the stability of communication between the device and the hub, the changing environment at the site is simulated.




Icons

Icons in the Ajax app display some of MotionCam Outdoor HighMount (PhOD) Jeweller states. Icons

can be checked in the **Devices**  tab.


Icon	Meaning
	<p>Jeweller signal strength – displays the signal strength between the hub and the device. The recommended values: 2–3 bars.</p> <p><u>Learn more</u></p>
	<p>Battery charge level of the device.</p> <p><u>Learn more</u></p>
	<p>A firmware update is available. Go to the device states or settings to find the description and launch an update.</p>
	<p>Other users have access to the Photo on Demand function.</p> <p><u>Learn more</u></p>
	<p>The device operates in the Always active mode.</p> <p><u>Learn more</u></p>
	<p>The device operates through the radio signal range extender.</p> <p><u>Learn more</u></p>


	<p>Delay when entering and/or leaving enabled.</p> <p><u>Learn more</u></p>
	<p>The device operates in Night mode.</p> <p><u>Learn more</u></p>
	<p>The masking is detected.</p>
	<p>The icon is displayed when you select the Max or Attenuation option in the <u>Signal attenuation test</u> menu.</p>
	<p>The device is automatically disabled due to exceeding the number of alarms.</p> <p><u>Learn more</u></p>
	<p>The device is permanently deactivated.</p> <p><u>Learn more</u></p>
	<p>Tamper alarm notifications are permanently deactivated.</p> <p><u>Learn more</u></p>

	<p>The device is deactivated until the first disarming of the system.</p> <p><u>Learn more</u></p>
	<p>Tamper alarm notifications are deactivated until the first disarming of the system.</p> <p><u>Learn more</u></p>
	<p>The device was not transferred to the new hub.</p> <p><u>Learn more</u></p>

States

The states include information about the device and its operating parameters. The states of MotionCam Outdoor HighMount (PhOD) Jeweller can be found in Ajax apps:

1. Go to the **Devices**  tab.
2. Select **MotionCam Outdoor HighMount (PhOD) Jeweller** in the list.

Parameter	Meaning
Malfunction	Tapping on  opens the list of device malfunctions.

	<p>The field is displayed only if a malfunction is detected.</p>
<p>New firmware version available</p>	<p>Tapping on ⓘ opens the instructions for updating the device's firmware.</p> <p>The field is displayed if a new firmware version is available.</p>
<p>Temperature</p>	<p>Device temperature. It is measured by the processor and changes depending on the ambient temperature.</p> <p>You can create a scenario by temperature to control automation devices.</p> <p><u>Learn more</u></p> <p>MotionCam Outdoor HighMount (PhOD) Jeweller is an outdoor detector, and its temperature is not considered when calculating the average temperature in the room to which the detector is assigned.</p> <p><u>Learn more</u></p>
<p>Jeweller signal strength</p>	<p>Jeweller signal strength between the device and the hub (or the radio signal range</p>

	<p>extender). The recommended value is 2–3 bars.</p> <p>Jeweller is a protocol for transmitting events and alarms.</p>
<p>Connection via Jeweller</p>	<p>Connection status on the Jeweller channel between the device and the hub (or the range extender):</p> <ul style="list-style-type: none"> • Online – the device is connected to the hub (or the range extender). Normal state. • Offline – the device is not connected to the hub (or the range extender). Check the device connection.
<p>Wings signal strength</p>	<p>Wings signal strength between the device and the hub (or the range extender). The recommended value is 2–3 bars.</p> <p>Wings is a protocol for photo verification of alarms and updating the device firmware.</p>
<p>Connection via Wings</p>	<p>Connection status on the Wings channel between the device and the hub (or the range extender):</p>

	<ul style="list-style-type: none"> • Online – the device is connected to the hub (or the range extender). Normal state. • Offline – the device is not connected to the hub (or the range extender). Check the device connection.
<Range extender name>	<p>Status of device connection to the <u>radio signal range extender</u>.</p> <ul style="list-style-type: none"> • Online – the device is connected to the range extender. • Offline – the device is not connected to the range extender. <p>The field is displayed if the device operates via the radio signal range extender.</p>
Battery charge	<p>The battery charge level of the device. Two states are available:</p> <ul style="list-style-type: none"> • OK. • Battery low.

	<p>When the batteries need to be replaced, Ajax apps and the security company will receive appropriate notifications.</p> <p><u>Learn more</u></p>
Lid	<p>The status of the device tampers that respond to detachment or opening of the device enclosure:</p> <ul style="list-style-type: none">• Open – the device is removed from the SmartBracket mounting panel, or its integrity is compromised. Check the mounting of the device.• Closed – the device is installed on the SmartBracket mounting panel. The integrity of the device enclosure and the mounting panel is not compromised. Normal state. <p><u>Learn more</u></p>
External power	<p>External power status:</p> <ul style="list-style-type: none">• Connected – the external power is connected to the detector.

	<ul style="list-style-type: none">• Disconnected – the external power is disconnected or not connected.
Transmitter power	<p>Displays the selected power of the transmitter.</p> <p>The parameter appears when the Max or Attenuation option is selected in the Signal attenuation test menu.</p> <p><u>Learn more</u></p>
Sensitivity	<p>Sensitivity level of the motion detector:</p> <ul style="list-style-type: none">• Low• Normal• High <p>Select the sensitivity depending on the results of the <u>detection zone test</u>.</p>
Anti-masking	<p>The status of the masking sensor:</p> <ul style="list-style-type: none">• Alarm – masking is detected.

	<ul style="list-style-type: none"> • On – the anti-masking system is enabled. Masking is not detected. • Off – the anti-masking system is disabled. Masking will not be detected. <p><u>Learn more</u></p>
Always active	<p>When this option is enabled, the detector is constantly armed, detects motion, and raises alarms.</p> <p><u>Learn more</u></p>
Alert if moved	<p>The status of the Alert if moved setting. When enabled, the built-in magnetometer detects attempts to tilt, shift, or detach the device from the surface.</p> <ul style="list-style-type: none"> • Yes – the magnetometer is enabled. • No – the magnetometer is disabled.
Permanent deactivation	<p>The status of the device permanent deactivation setting:</p>

- **No** – the device operates in the normal mode and transmits all events.
- **Entirely** – the device is completely excluded from the system operation by the hub admin. The device does not execute system commands and does not report alarms or other events.
- **Lid only** – the hub admin has disabled notifications about tamper triggering.
- **By number of alarms** – the device is automatically excluded from the system when the number of alarms is exceeded. The number of alarms is specified in the [Devices auto deactivation hub](#) settings in Ajax PRO-app.

[Learn more](#)

One-time deactivation

Shows the status of the device one-time deactivation setting:

- **No** – the device operates in the normal mode.



	<ul style="list-style-type: none"> • Entirely – the device is entirely excluded from the operation of the system for a time the armed mode is active. The device does not execute system commands and does not report alarms or other events. • Lid only – notifications on the tamper triggering are disabled for a time the armed mode is active. <p><u>Learn more</u></p>
Photo on demand access	Displayed if Allow photos on demand is enabled in the space settings in the Privacy section.
Alarm reaction	
Operating mode	<p>Shows how the detector reacts to alarms:</p> <ul style="list-style-type: none"> • Instant alarm – the armed detector immediately reacts to a threat and raises the alarm. • Entry/Exit – when a delay is set, the armed device starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.

	<ul style="list-style-type: none">• Follower – the detector inherits the delays from Entry/Exit detectors. However, when the Follower is triggered individually, it immediately raises the alarm.
Delay when entering	<p>Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the premises.</p> <p><u>Learn more</u></p>
Delay when leaving	<p>Delay when leaving (arming delay) is the time the user has to leave the premises after arming.</p> <p><u>Learn more</u></p>
Arm in Night mode	<p>When this option is enabled, the device will enter the armed mode when the system is set to Night mode.</p> <p><u>Learn more</u></p>
Night mode delay when entering	<p>Entry delay time in Night mode. Delay when entering (alarm activation delay) is the time the user has to disarm</p>

	<p>the security system after entering the premises.</p> <p>Learn more</p>
Night mode delay when leaving	<p>Leaving delay time in Night mode. Delay when leaving (arming delay) is the time the user has to leave the premises after enabling Night mode.</p> <p>Learn more</p>
Night mode delay	<p>Entry delay time in Night mode when the device is set to the Follower operating mode. It is the time the user has to disable Night mode (alarm activation delay) after the Entry/Exit detector is triggered.</p> <p>Learn more</p>
Firmware	Device firmware version.
Device ID	Device ID. It is also available on the QR code on the device enclosure and its package box.
Device No.	Device number. This number is transmitted to the CMS in case of an alarm or event.

Settings

To change MotionCam Outdoor HighMount (PhOD) Jeweller settings in the Ajax apps:

1. Go to the **Devices**  tab.
2. Select **MotionCam Outdoor HighMount (PhOD) Jeweller** in the list.
3. Go to **Settings**  .
4. Set the required settings.
5. Tap **Back** to save the new settings.

Settings	Meaning
Name	<p>Device name. Displayed in the list of hub devices, text of SMS and notifications in the events feed.</p> <p>To change the device name, tap on the text field.</p> <p>The name can contain up to 24 Latin characters or up to 12 Cyrillic characters.</p>
Room	<p>Selecting the virtual room to which MotionCam Outdoor HighMount (PhOD) Jeweller is assigned.</p>

	<p>The room name is displayed in the text of SMS and notifications in the events feed.</p>
Alarm LED indication	<p>When disabled, the LED indicator doesn't notify about alarms and tamper triggering.</p>
Sensitivity	<p>Sensitivity level of the motion detector. It depends on the type of the facility, the presence of probable sources of false alarms, and the specifics of the protected area:</p> <ul style="list-style-type: none">• Low – there are likely sources of false alarms in the protected area.• Normal (by default) – recommended value, suitable for most facilities. Do not change it if the detector operates correctly.• High – there are no obstacles in the protected area; the maximum detection distance and the alarm detection speed are important. For example, if the detector is installed in a narrow passage.

Anti-masking	When this option is enabled, the device detects the masking.
Notify of sensors icing	<p>When this option is enabled, the device notifies if sensors are covered with ice and do not detect motion.</p> <p>The setting is displayed if the Anti-masking option is enabled.</p>
Image resolution	<p>The resolution of photos taken by the camera of the device:</p> <ul style="list-style-type: none">• 320 × 240 (by default)• 640 × 480 <p>The higher the resolution, the more detailed the image is. It takes longer to transfer photos with higher resolution.</p> <p>The selected resolution is set for Photo by alarm, Photo by scenario, Photo on demand, and Photo by schedule.</p>
Photos by alarm	<p>The number of photos taken by the camera of the device:</p> <ul style="list-style-type: none">• No photo• 1 photo

	<ul style="list-style-type: none"> • Series of 2 • Series of 3 (by default) • Series of 4 (only for 320 × 240 px image resolution) • Series of 5 (only for 320 × 240 px image resolution) <p>The selected number of photos is set for Photo by alarm and Photo by scenario.</p>
<p>Alarms with photo verification</p>	<p>The number of alarms accompanied by photos.</p> <p>You can choose if the photo will be transmitted each time the device is triggered or specify the exact number of alarms: 1 to 10.</p> <p>An alarm counter with photo verification is reset when the security system is disarmed and rearmed.</p> <p>The setting is available if the Always active option is disabled. When the detector is in the Always active mode, it will transmit a photo every time it is triggered.</p>
<p>Photos on demand</p>	<p>The number of photos on demand:</p>

	<ul style="list-style-type: none"> • 1 photo • Series of 2 • Series of 3 • Series of 4 (only for 320 × 240 px image resolution) • Series of 5 (only for 320 × 240 px image resolution) <p>It is displayed if the Allow photos on demand feature is enabled in the space settings in the Privacy section.</p>
Always active	<p>When enabled, the detector is always in the armed mode and detects motion.</p> <p>Learn more</p>
Alert if moved	<p>When this option is enabled, the device detects attempts to tilt, shift, or detach it from the surface.</p>
Notify on risk of fast battery discharge	<p>When this option is enabled, the user is notified when incorrect installation affects the device's battery life because the detector often triggers without an actual intrusion.</p>

Alert with a siren

If motion detected	When enabled, sirens are activated when the device detects the motion.
If masking detected	When enabled, sirens are activated when the device detects masking. The parameter is displayed if the Anti-masking option is enabled.
If device was moved	When this option is enabled, the sirens are activated when the device detects attempts to tilt, shift, or detach it from the surface. The setting is displayed if the Alert if moved option is enabled.

Alarm reaction

Operating mode	Specify how this device will react to alarms: <ul style="list-style-type: none">• Instant alarm – the armed detector immediately reacts to a threat and raises the alarm.• Entry/Exit – when a delay is set, the armed device
----------------	--

	<p>starts the countdown and doesn't raise the alarm even if triggered until the countdown ends.</p> <ul style="list-style-type: none"> • Follower – the detector inherits the delays from Entry/Exit detectors. However, when the Follower is triggered individually, it immediately raises the alarm.
<p>Delay when entering</p>	<p>Selecting delay time when entering: 5 to 255 seconds.</p> <p>Delay when entering (alarm activation delay) is the time the user has to disarm the security system after entering the premises.</p> <p><u>Learn more</u></p>
<p>Delay when leaving</p>	<p>Selecting delay time when leaving: 5 to 255 seconds.</p> <p>Delay when leaving (arming delay) is the time the user has to leave the premises after arming.</p> <p><u>Learn more</u></p>
<p>Arm in Night mode</p>	<p>When enabled, the detector will enter the armed mode</p>

	<p>when the system is set to Night mode.</p> <p><u>Learn more</u></p>
Night mode delay when entering	<p>Delay time when entering in Night mode: 5 to 255 seconds.</p> <p>Delay when entering (alarm activation delay) is the time the user has to disable Night mode after entering the premises.</p> <p><u>Learn more</u></p>
Night mode delay when leaving	<p>Delay time when leaving in Night mode: 5 to 255 seconds.</p> <p>Delay when leaving (arming delay) is the time the user has to leave the premises after enabling Night mode.</p> <p><u>Learn more</u></p>
Night mode delay	<p>Delay time in Night mode: 5 to 255 seconds.</p> <p>It is the time the user has to disable Night mode (alarm activation delay) after the Entry/Exit detector is triggered.</p>

	<p>The setting is displayed if the device is set to the Follower operating mode and the Arm in Night mode option is enabled.</p> <p><u>Learn more</u></p>
Scenarios	<p>Opens the menu for creating and setting scenarios for the device.</p> <p>The menu allows you to create a scenario where the detector takes photos when specified Ajax devices are triggered or by schedule.</p> <p><u>Learn more</u></p>
Firmware update	<p>Switches the device to the firmware updating mode if a new version is available.</p>
Motion detection area	<p>Opens the menu for checking the motion detection area. You can take a photo to check the camera field of view and maximum detection zone.</p> <p>The photo helps to adjust the detector's tilt angle and horizontal position correctly.</p> <p><u>Learn more</u></p>

<p>Jeweller signal strength test</p>	<p>Switches the device to the Jeweller signal strength test mode.</p> <p>The test allows you to check the signal strength between the hub (or the radio signal range extender) and the device via the wireless Jeweller data transfer protocol to select the optimal installation site.</p> <p><u>Learn more</u></p>
<p>Wings signal strength test</p>	<p>Switches the device to the Wings signal strength test mode.</p> <p>The test allows you to check the signal strength between the hub (or the radio signal range extender) and the device via the wireless Wings data transfer protocol to select the optimal installation site.</p> <p><u>Learn more</u></p>
<p>Detection zone test</p>	<p>Switches the device to the detection zone test mode.</p> <p>The option allows testing motion and masking sensors. The test helps to check whether the device is installed correctly to detect all alarms.</p>

	<u>Learn more</u>
Signal attenuation test	<p>Switches the device to the signal attenuation test mode.</p> <u>Learn more</u>
User guide	<p>Opens the MotionCam Outdoor HighMount (PhOD) Jeweller user manual in the Ajax app.</p>
Permanent deactivation	<p>Allows the user to disable events of the device without removing it from the system.</p> <p>Three options are available:</p> <ul style="list-style-type: none">• No – the device operates in normal mode and transmits all events.• Entirely – the device will not execute system commands or participate in automation scenarios, and the system will ignore device alarms and other notifications.• Lid only – the system will ignore notifications about the triggering of the device tamper only. <u>Learn more</u>

The system can also automatically deactivate devices when the set number of alarms is exceeded.

[Learn more](#)

One-time deactivation

Allows the user to disable events of the device until the first disarm.

Three options are available:

- **No** – the device operates in normal mode and transmits all events.
- **Entirely** – the device is entirely excluded from the operation of the system until the first disarm. The device does not execute system commands and does not report alarms or other events.
- **Lid only** – notifications on the tamper triggering are disabled until the first disarm.

[Learn more](#)

Delete device	Unpairs the device, disconnects it from the hub, and deletes its settings.
---------------	--

Adjusting motion detection area



The **Motion detection area** feature allows taking a test photo to check the camera's field of view and the sensors' detection zones and ranges. The test photo helps adjust the detector's tilt angle and horizontal position. The proper device installation ensures efficient movement detection and prevents false alarms.

It is recommended to check the motion detection area once the device is installed or if the installation place has been changed.

The tilt angle depends on the detector installation height. To set the proper tilt angle relative to the installation height, refer to the table below or the [Installation](#) section.

Tilt angle relative to the detector installation height 



To take a test photo of the motion detection area, in the Ajax app:

1. Go to the **Devices**  tab.
2. Select **MotionCam Outdoor HighMount (PhOD) Jeweller** from the list.
3. Go to **Settings** .
4. Go to the **Motion detection area** menu.
5. Tap **Take photo**.
6. If the photo shows the proper motion detection area, the detector is installed correctly. If not, adjust the tilt angle and horizontal position of the detector and tap **Retake photo**.
7. Tap **Back** to close the photo.

You can download the test photo with sectors of the sensors' detection zones and ranges. The last test photo taken is also available in the **Motion detection area** menu, along with the date and time it was taken.

Configuring the Photo on demand feature

An admin or a user with access to privacy settings can enable and configure the **Photos on demand** feature. To do this, in the Ajax app:

1. Select a space.
2. Go to the **Control**  tab.
3. Go to the space **Settings** .
4. Go to the **Privacy** settings.
5. Enable the **Allow photos on demand** option.
6. Select the user category:
 - Users
 - Installers
 - Companies
7. Select a specific user, a PRO, or a company. A list of cameras, DVRs, and detectors with photo verification added to the space will open.
8. Select the device to which you want to provide access.
9. Enable the **Take & view photos** option.
10. Specify when the user can take on-demand photos: **Always** or **When device armed**.
11. Tap **Back** to save the settings.
12. Repeat steps 6–11 for any other user and devices to which you want to provide access.

After saving the privacy settings, all users who have access to the event feed will receive a notification of who has received access rights and which user has granted these rights.



[Learn more](#)

Configuring the Photo by scenario feature

First, you need to enable the **Photo by scenario** feature in the space **Privacy** settings. After that, it is possible to create scenarios for taking photos in case of alarms from the specified devices.

Enabling Photo by scenario feature

An admin or a user with access to privacy settings can enable and configure the Photos by scenario feature. To do this, in the Ajax app:



1. Select a space.
2. Go to the **Control**  tab.
3. Go to the space **Settings** .
4. Go to the **Privacy** settings.
5. Enable the **Allow photos by scenarios** option.

6. Tap **Back** to save the settings.

[Learn more](#)

Creating a scenario for taking photos by an alarm of a specified device

An admin or PRO with system configuration rights can create and configure a scenario by alarm. To do this, in the Ajax app:

1. Select a space.
2. Go to the **Devices**  tab.
3. Select a detector with photo verification from the device list.
4. Go to its **Settings** .
5. Go to Scenarios and tap **Add scenario**.
6. Select the scenario type **By schedule**.
7. Select the devices and type of alarms that will trigger the photo verification.
8. Specify:
 - **Name** of the scenario.

- **Devices triggering the scenario.** Select which devices trigger the scenario (available if two or more devices are selected for this scenario):
 - **Any** – the scenario will run if any selected device is triggered.
 - **All selected** – the scenario will run if all selected devices are triggered.
- **Max actuating time for all selected devices.** The time frame within which all selected devices should be triggered to run the scenario. Available only for the **All selected** option.
- **Device action** – only Take photo by default. The number of photos equals the number of **Photos by alarm** specified in the settings.
- **When the detector takes photos: Always or When armed.** By default, the motion detector takes photos by scenario only when armed.





Note that only an admin can specify when the detector takes photos.

9. Tap **Save**. The scenario will appear in the list of device scenarios.

Configuring the Photo by schedule feature

An admin or PRO with system configuration rights can create and set up a scenario by schedule. To do this, in the Ajax app:

1. Select a space.
2. Go to the **Devices**  tab.
3. Select a detector with photo verification from the device list.
4. Go to its **Settings** .
5. Go to **Scenarios** and tap the **Add scenario** button.
6. Select the scenario type **By schedule**.
7. Specify:
 - **Name** of the scenario.
 - **Device action** – only **Take photo** by default. The number of photos equals the number of **Photos on demand** specified in the settings.
 - **Execution time** – the time of a day when the detector takes photos by schedule.

- **Repeat** – the days of the week when the detector takes photos by schedule.
- **When the detector takes photos: Always or When armed.** By default, the motion detector takes photos by schedule only when armed.



Note that only an admin can specify when the detector takes photos.

8. Tap **Save**. The scenario will appear in the list of device scenarios.

Indication

The MotionCam Outdoor HighMount (PhOD) Jeweller LED indicator may light up green or red, depending on the status of the device.

Indication upon pressing the power button

Event	Indication
Turning on the device.	Lights up green for about 0.5 s.
Turning on the device that has not been added to the hub.	Lights up green for about 0.5 s, flashes green 6 times, and

	flashes red 3 times rapidly.
Turning off the device.	Lights up red for about 1 s, then flashes 3 times.

Indication of activated device

Event	Indication	Note
The device is added to the hub.	Lights up green for about 0.5 s.	
The device is deleted from the hub.	Flashes green six times for 2 s, then flashes red three times rapidly after 0.5 s.	
<ul style="list-style-type: none"> • Motion alarm. • Tamper alarm. • The device was moved (magnetometer alarm). • Masking is detected / restored to normal state. • Taking photos on demand. 	Lights up green for about 0.6 s.	

<p>The detection zone test of the motion sensors is running for the device.</p>	<p>Lights up green constantly and goes out for 0.6 s when motion is detected.</p>	<p><u>Learn more</u></p>
<p>The detection zone test of the masking sensor is running for the device.</p>	<p>Lights up red constantly and goes out completely when masking is detected. When the masking is removed, lights up red again.</p>	<p><u>Learn more</u></p>
<p>Calibration of the masking sensor and magnetometer is in progress.</p>	<p>Lights up green for 0.5 s and goes out for 0.5 s.</p>	<p>Starts automatically when the device is installed on SmartBracket.</p>
<p>The battery charge is low.</p>	<p>Slowly lights up green and slowly goes out when the device is triggered.</p>	<p>The battery needs to be replaced.</p>
<p>The battery is completely discharged.</p>	<p>Flashes green continuously.</p>	<p>The battery needs to be replaced.</p>
<p>The device hardware error or its sensors malfunction.</p>	<p>Lights up red for about 1 s every 4 s.</p>	<p>The device requires maintenance; contact our <u>Technical Support</u>.</p>

<p>Calibration of the masking sensor or magnetometer has failed.</p>	<p>Lights up red for about 1 s every 13 s.</p>	<p>Ensure the device is installed properly and nothing obstructs its field of view. Remove the device from SmartBracket and install it again to restart the calibration.</p> <p>If the indication repeats, contact our Technical Support.</p>
<p>Downloading a new firmware version of the device.</p>	<p>Lights up green twice and goes out every 3 s.</p>	
<p>The device firmware is being updated.</p>	<p>Flashes green 2 times every 1 s.</p>	<p>The indication lasts until the firmware update is finished.</p>

Malfunctions

When the device detects a malfunction (for example, there is no connection via the Jeweller protocol), a malfunction counter is displayed in the Ajax app in the upper left corner of the device icon.

All malfunctions can be seen in the device states. Fields with malfunctions will be highlighted in red.

Malfunction is displayed if:

- The device temperature is outside acceptable limits.
- The device lid is open (tamper is triggered).
- The masking sensor could not be adjusted.
- Magnetometer error.
- No connection with the hub or radio signal range extender via Jeweller.
- No connection with the hub or radio signal range extender via Wings.
- The device battery is low.

Maintenance

Regularly check the functioning of the device. The optimal frequency of checks is once every three months. Clean the device enclosure from dust, cobwebs, and other contaminants as they emerge. Use soft, dry wipes suitable for equipment maintenance.

Do not use substances that contain alcohol, acetone, gasoline, and other active solvents to clean the device. Wipe the lens carefully, as scratches may impair the detector sensitivity.

The pre-installed batteries provide up to 3 years of the detector's battery life at the rate of 1 alarm per day with the standard Jeweller settings (the polling period is 36 seconds). The security system will send an appropriate notification if the detector batteries are nearly depleted. The LED will light up and go out gradually when the detector identifies any movement or if the tamper triggers.

MotionCam Outdoor HighMount (PhOD) Jeweller can work up to 2 months after the low battery signal is received. We recommend replacing the batteries immediately upon notification. It is advisable to use lithium batteries, as they have a large capacity and are less affected by temperatures.

[How long Ajax devices operate on batteries, and what affects this](#)

Technical specifications

[All technical specifications](#)

[Compliance with standards](#)

Setup in compliance with EN 50131 requirements

Warranty

The warranty for the products of the “Ajax Systems Manufacturing” Limited Liability Company is valid for 2 years after purchase.

If the device does not operate properly, we recommend contacting support service first, as most technical issues can be resolved remotely.

Warranty obligations

User Agreement

Contact Technical Support:

- email
- Telegram

Manufactured by “AS Manufacturing” LLC

Subscribe to the newsletter about safe
life. No spam

Subscribe